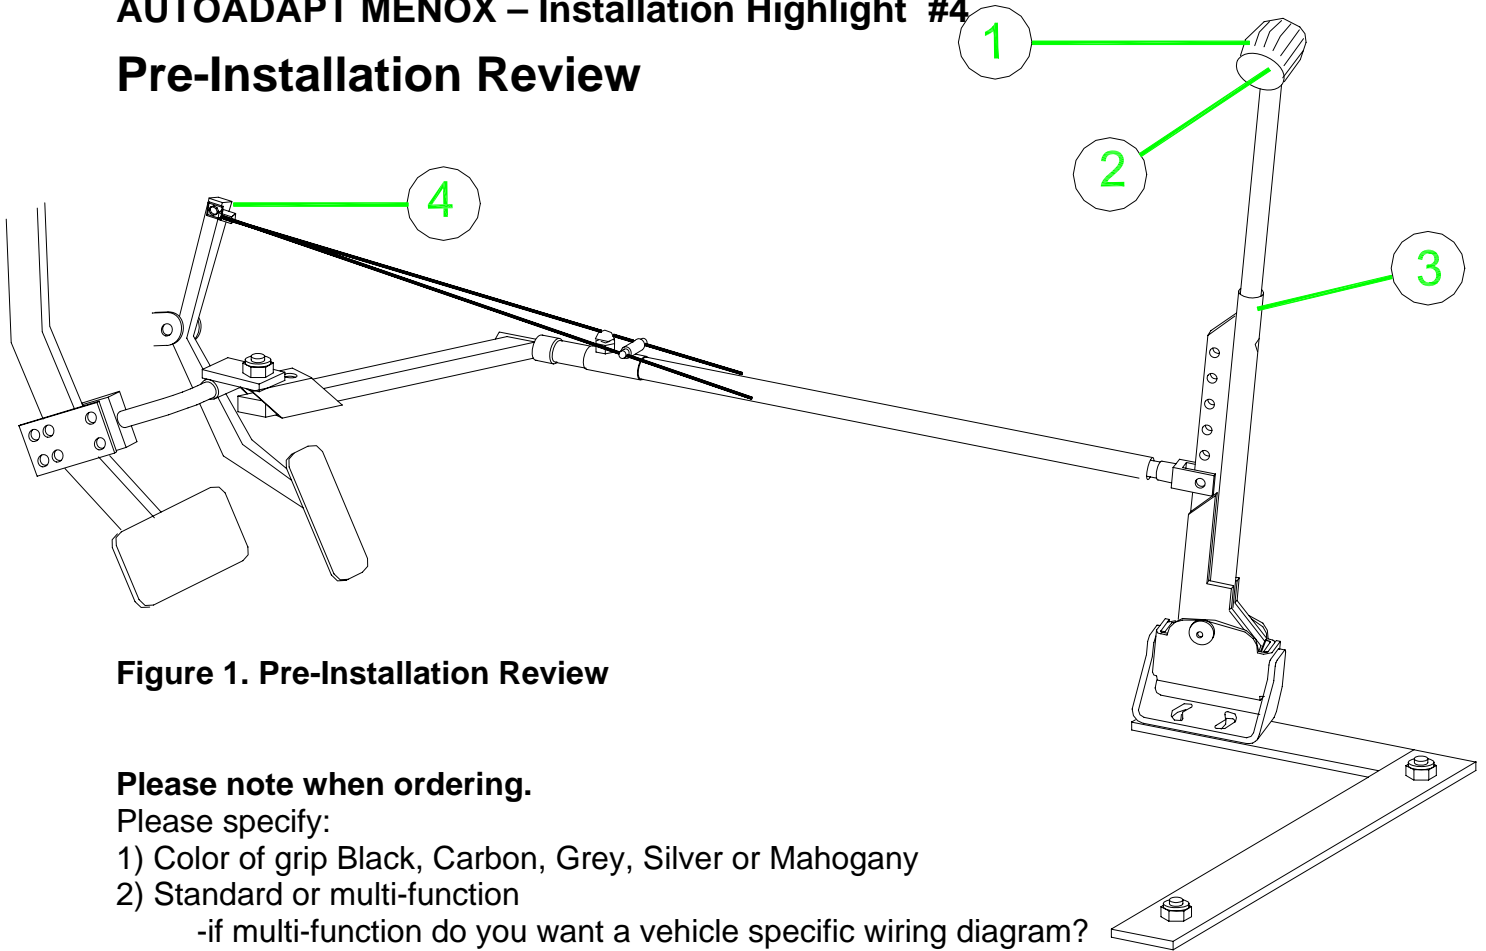


## AUTOADAPT MENOX – Installation Highlight #4 Pre-Installation Review



**Figure 1. Pre-Installation Review**

### **Please note when ordering.**

Please specify:

- 1) Color of grip Black, Carbon, Grey, Silver or Mahogany
- 2) Standard or multi-function
  - if multi-function do you want a vehicle specific wiring diagram?
  - if so, provide year, make, model and VIN # (required).
  - does the driver have any special need for the position or operation of the functions on the grip?
- 3) Covers - if so what color? Beige, Black, Light Gray, Dark Gray.
- 4) Do you need a Steering Knob? Color? Shape?

### **Notes for installation:**

- 4) Check out accelerator pedal on vehicle. Is there clearance for the throttle rods or wire rope assembly? Does it need a throttle cable adaptor assembly? Does a bracket need to be adapted to the pedal? See figure 14 of instructions.
- 5) Position driver in seat and mark position so Menox can be position for the best range of motion for that seat position. Does this position impact second driver?
- 6) Be able to provide solid mounting through the floor or utilizing seat base holes. remove any padding, etc. Use adequate large washers to distribute load on underside of floor.
- 7) Provide adequate clearance for grip while braking. (See figure 2). No interference with dash.

U.S. DISTRIBUTOR



16141 Runnymede Street  
Van Nuys, CA 91406-2913  
TEL:(818) 782-6793  
FAX:(818) 782-6485  
E-MAIL: info@drivingsystems.com

MANUFACTURED BY:

